


AIR-CONDITIONER REMOTE CONTROLLER INSTRUCTIONS

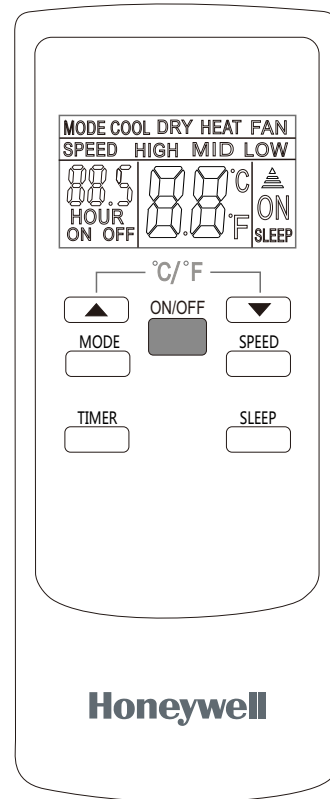

- Carefully read these “instructions” for safe and correct use of the air-conditioner.
- Carefully keep the “instructions” manual as it can be referred to at any time.

CONTENTS

Buttons description-----	1
Usage-----	3
Fix batteries -----	3
Cooling/Heating operation mode-----	3
Fan operation mode-----	3
Drying operation mode-----	4
Night Luminous Function of Remote Controller ----	4
Attention -----	5

Attention

1. Aim the remote control towards the receiver on the air-conditioner.
2. The remote control should be within 8 meters away from the receiver.
3. No obstacles between the remote control and the receiver.
4. Do not drop or throw the remote control.
5. Do not put the remote control under the strong sun rays or heating devices and other heating sources as well.
6. Use two 7# batteries; do not use electric batteries.
7. Take the batteries out of remote controller when you don't use it for a long time.
8. When the operation sound can not be heard indoor unit or the transmission symbol on the display screen does not flash, the batteries need to be replaced.
9. If the reset phenomenon occurs when pressing the button of the remote control, the electrical quantity is deficient and the batteries need to be replaced.
10. Waste batteries should be disposed of properly.

Note:

- * **The picture is general remote controller, contains almost all of the function buttons. They may be slightly different from material object (depend on model).**
- * **All the figures above are the displays after being initially electrified or re-electrified when switching off. In actual operations, the remote controller screen only displays the related items.**
- * **The cooling only units don't have the function of heating or electric heating. When the remote controller turns to such function buttons, the units will not result such effect. Please don't turn the remote controller to such buttons.**

Usage

★ Drying operation mode

1. Press the “ON/OFF” button, the air-conditioner starts to operate.
2. Press the “MODE” button, select the Dry operation mode.
3. Press the “▲” or “▼” button, and set the temperature from 16°C (60°F) to 32°C (90°F) °C with intervals of 1°C
4. Press the “SPEED” button, you can select fan speed from LOW, MID, HIGH.
5. Press the “ON/OFF” button again, the air-conditioner stops.


Note:

This manual introduces the functional modes for all of the remote control, If you press a button and there isn't any reaction, the air-conditioner you have bought doesn't have this function so.

★ Night Luminous Function of Remote Controller (Only the remote controller with this function can be used)

For your convenient use of the remote controller in the darkness without any lighting, this remote controller has blue background light and luminous pushbuttons. No matter what you press on any of the pushbutton, the background light will immediately release soft light so that you are easy to operate the remote controller. If you do not operate the controller within 10 seconds, the background light will automatically disappear.

Buttons description

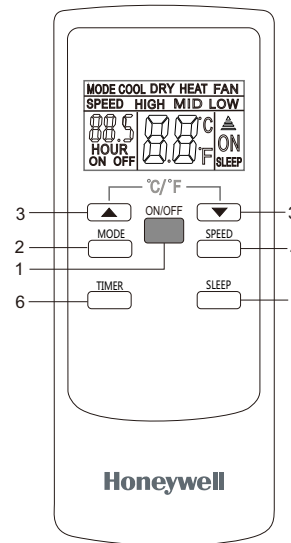

Note:

All the figures above are the displays after being initially electrified or re-electrified after power off. In actual operations, the remote controller screen displays related items only.

The **cooling only units** don't have the function of heating or electric heating. When the remote controller turns to such function buttons, the units will not result such effect.
*Please don't turn the remote controller to such buttons.

1. “ON/OFF” button
You can start or stop the air-conditioner by pressing this button.
2. “MODE” button
Press this button, the running mode will change as below:

COOL → DRY → HEAT → FAN
↑

Note: cooling only unit has no heating function.

3. a. “▲” or “▼” button
Press the “▲” or “▼” button, you can set the temperature range from 16°C (60°F) to 32°C (90°F), Display will change when you touch the button.
- b. “▲” and “▼” button
Press the “▲” and “▼” buttons at the same time above 3s, you can set the “°C” or “°F”.

4. "SPEED" button

You can select the fan speed as follows by pressing this button:

→LOW→MID→HIGH

5. "SLEEP" button

- * Press the "SLEEP" button, the sleeping indicator light of indoor unit flashes on.
- * The air-conditioner runs in sleeping mode for 10 hours.
- * The unit will turn off automatically if the timing mode are running out of time.
- * **Note:** Press the "MODE" or "ON/OFF" button, the remote controller clears sleeping mode away.
The "SLEEP" button is invalid in fanning mode.

7. "TIMER" button

Setting the timer time "ON" :

- When the remote controller is in off mode, press the "TIMER" button, LCD displays "HOUR ON" and time with the time settings ranging from 30min to 24hrs.
- You can press the "▲" or "▼" button to adjust the time timer, each touch will set the time to increase or reduce 30min per pressing .
- Press "TIMER" button again to set the "timer on" function.
- You can set another function to ensure a suitable state after the air conditioner is turned on (including mode, temperature , fan speed and so on). LCD will display and keep all your settings and when the timer reaches the set time, the air conditioner will automatically start according to your settings.

Setting the time timer "OFF"

- When the remote control is in on mode, press the "TIMER" button, LCD displays "HOUR OFF" and time with the time settings ranging from 30min to 24hrs.
- You can press the "▲" or "▼" button to adjust the time timer, each touch will set the time to increase or reduce by 30min per pressing .
- Press the "TIMER" button again to set the "timer off" function.

★ Fix batteries



- Slide to open the cover according to the direction indicated by the arrowhead.
- Put into two brand new batteries (7#), position the batteries to right electric poles (+&-).
- Put back the cover.

★ Cooling/Heating operation mode (cold wind type has no heating function)

- Press the "ON/OFF" button, the air-conditioner starts to operate.
- Press the "MODE" button, select the Cooling or Heating operation mode.
- Press the "Δ" or "▽" button, and set the temperature, from 16°C(60°F) to 32°C(90°F) with intervals of 1°C
- Press the Speed button, you can select fan speed from LOW, MID, HIGH.
- Press the "ON/OFF" button again, the air-conditioner stops.

★ Fan operation mode

- Press the "ON/OFF" button, the air-conditioner starts to operate.
- Press the "MODE" button, select the fan operation mode.
- Press the "SPEED" button, you can select fan speed from LOW, MID, HIGH.
- Press the "ON/OFF" button again, the air-conditioner stops.

Remark: In the circulation operation mode, the temperature settings is non-effective.